

Background installation and use of foreign lan

Step 1: install our software (smart pass) on the computer according to the installation package you sent. When you install, you can choose Chinese and English language. After you install it, a website will appear (if you did not copy the website at that time, reopen the smart pass software and it will be displayed again). Log in to this website in Google browser (be sure to use Google browser, such as other browser functions May not work)

Default login account: admin Password: 123456

remarks:

1. If there is a security software prompt during installation, you can click "allow" or shut down or uninstall the security software during installation. In addition, you'd better follow the default save path during installation, and don't change it, otherwise the generated web address may not be opened.
2. Different computers installed on the same network have different URLs
3. If the website cannot be opened normally because some steps are not allowed during installation or the saving path is changed, you can find MIPs in the saved path (the default is Disk C) and uninst.exe in it

Remove the program and reinstall the software.

Step 2: click log in management in our temperature measurement equipment, log in a string of numbers in the back-end web address of the computer end, and then add the machine to the back-end for some settings and data viewing

For example, the background web address is: <http://192.168.0.111:9000/mips>. You only need to enter 192.168.0.111 to log in on the machine

Step 3: refer to our operation instructions for the operation method later